


PRODUCT MANUAL

Aroma diffuser

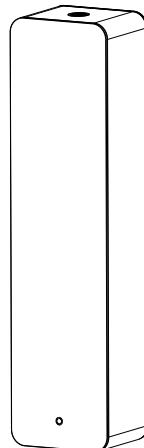

BT




V2.0

Android system IOS system

If the QR code cannot be scanned, please search for "ScentMarketing" in Google play or APP store.

01 Specification

Model	A316
Size	195*150*585mm
Bottle	1000ml
Input	12V==2A
Power	11W
Coverage	900m ² /2700m ³ /95000ft ³
N.W.	3.6kg
Material	Glass, Stainless steel

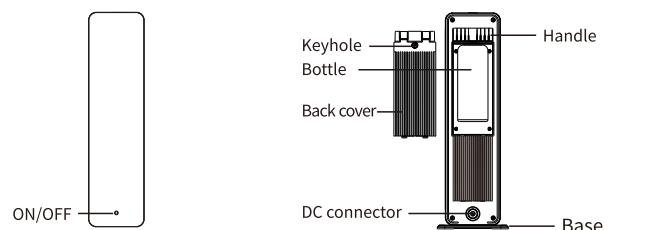  

ON/OFF


02 Bluetooth instruction

Where to get the app:


Please search for "Scent Marketing" in Google play or APP store.

Note:


Make sure that the location function of Bluetooth and mobile phone is enabled.

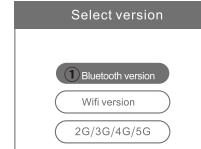

1. Open the scent marketing app and select Bluetooth.

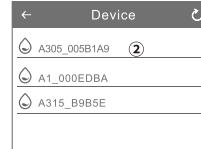


2. Select your device.

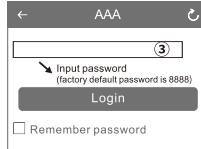


3. Enter the default password 8888 and press Login.



4. On the Device Control page; You can change your device name and label information of your scent diffuser.
NOTE: Press the "Save" button at the top right corner of the screen after each change.

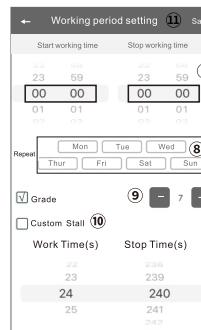

5. Different schedules by pressing the "+" button. To delete a schedule, swipe left.

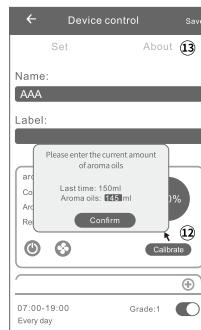

6. Press the toggle button to turn on/off any schedule.



7. On the "Working period setting" page; Set the hours of the day you want your diffuser to run by scrolling the "Start working time" and "Stop working time".

8. Select the days of the week you want your diffuser to run (all days are pre-selected).

9. Press "+" or "-" to increase or decrease the preset intensity grades (1-20. See chart for details).

10. Check (✓) the Custom box to create a custom intensity and scroll the "Spray Time" and "Pause Time".

11. Press the "Save" button to update the Settings.



12. Tap "Calibrate" to calibrate consumption. It is advised to calibrate after working for at least 10 days. Please measure the remaining oil of the bottle first before starting calibrating. Enter the current essential oil volume, then click "Confirm" to update the consumption and remaining days automatically.


13. Change the default password by pressing on the "About" tab, in the "Device control".

Note:

If you forget the password, please press the long press the ON/OFF button for 3s to restore factory setting. The factory settings password is 8888.


14. Press the "Password Change" to access the password change page.

04 Installation steps

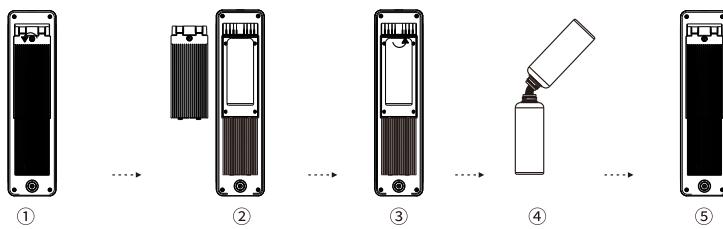

1. Open the back cover with key;
2. Remove the back cover;
3. Twist off the bottle cap;
4. Add fragrance oil into the bottle;
5. Tighten the bottle cap, place the bottle back in the machine, and lock the back cover with a key.

Installation mode:

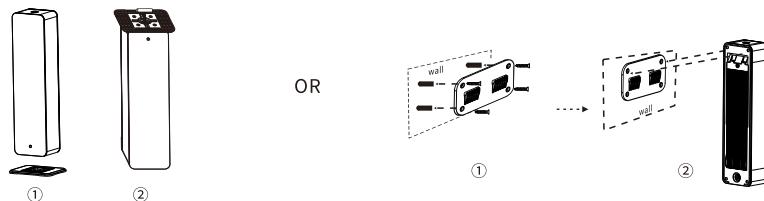

Floor standing:

1. Make sure the base is aligned with the 4 holes at the bottom of the machine, then fix the screws;
2. Align the base with the holes on the bottle of the machine, and secure it with screws.

Wall mount:

1. Drill the 4 screws into wall;
2. Hang the machine to the screws.


04 Concentration and Consumption

Grade	Work time(s)	Stop time(s)	Consumption(g/h)
G1	15s	300s	0.13
G2	15s	150s	0.40
G3	20s	120s	0.75
G4	20s	85s	0.95
G5	25s	80s	1.10
G6	30s	75s	1.41
G7	30s	60s	1.58
G8	30s	50s	1.84
G9	30s	40s	2.00
G10	30s	33s	2.23
G11	33s	30s	2.54
G12	40s	30s	2.87
G13	50s	30s	3.40
G14	60s	30s	3.68
G15	75s	30s	4.20
G16	80s	25s	4.24
G17	85s	20s	4.50
G18	120s	20s	4.71
G19	150s	15s	4.80
G20	300s	15s	5.00
Customize	5-500s	5-500s	—

- Note:** 1. The above data is for reference only. If customers use essential oils with different viscosities, the oil consumption will vary.
 2. For the best diffusion effect, it's recommended to use essential oils with a viscosity below 30mPa.s. And the optimal working temperature is 25°C.

06 Warning

1. Please keep the machine vertical after installation. Tilting or lying flat can cause oil to overflow, and the circuit board may be contaminated, which could affect its efficiency.
2. Should not modify, dismantle or repair the machine arbitrarily. Any malfunction occurs, please contact the relevant technician immediately.
3. The machine does not work when it is not in the programmed working period, even the atomization icon is displayed on the screen;
4. When the machine is in lock status, the button can not be operated and there is no display on screen.

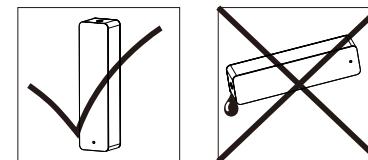

08 Troubleshooting

Before asking to have the machine repaired, please try to diagnose the problems first based on the following instructions.

Breakdown	Solution
Does not diffuse	<ul style="list-style-type: none"> -To check whether the power switch is turned on. -The machine may not be in the programmed working period; -Air pump may be damaged, please replace a new one; -To check whether the tube is loose or not.
Weak diffuse	<ul style="list-style-type: none"> -The atomizing core may be blocked, please clean it by alcohol or replace a new component; -The gasket may be damaged/loose; -The air tube may be loose.
Oil leakage	<ul style="list-style-type: none"> -To check whether the bottle is loose or not. -The gasket in the atomizer head may be damaged or loose.
Oil sprinkle	<ul style="list-style-type: none"> -The atomized head may be damaged, please replace a new one. -To check the machine is tilted or lie down, please keep the machine upright.
Abnormal noise	<ul style="list-style-type: none"> -The air pump may be loose, please retighten the pump. -The air pump may be damaged, please replace a new one.

08 Equipment cleaning

The machine needs to be cleaned when the following situations happen:

1. You're about to replace another essential oils;
2. The atomization volume becomes weak .

Cleaning steps:

1. Find a clean bottle and fill it with industrial alcohol.
2. Add industrial alcohol into bottle about 15%, and make it diffuse 5 minutes.
3. Airing the atomized head and the bottle.