 


PRODUCT MANUAL

Aroma diffuser

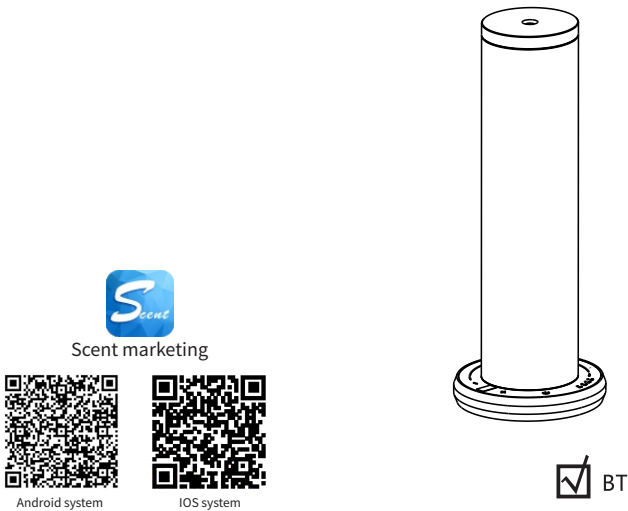

If the QR code cannot be scanned, please search for "ScentMarketing" in Google play or APP store.

01 Specification

[Model]	A313
[Size]	112*112*293mm
[Bottle]	120ml
[Input]	DC12V = 1A MAX
[Power]	4.5W
[Coverage]	100m ² /300m ³ /10500ft ³
[N.W.]	0.95 kg
[Material]	Aluminum

 


Note:
Check and make sure the packaging is complete when you first open it, If there is any problem please contact with us soon.


02 Bluetooth instruction

Where to get the app:
Please search for "Scent Marketing" in Google play or APP store.


Note:
Make sure that the location function of Bluetooth and mobile phone is enabled.

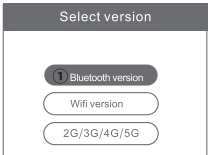

 
1. Open the scent marketing app and select Bluetooth.

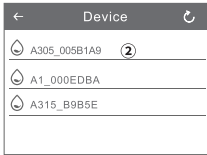

 2. Select your device.

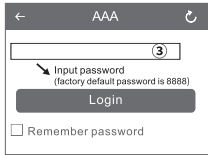


 3. Enter the default password 8888 and press Login.

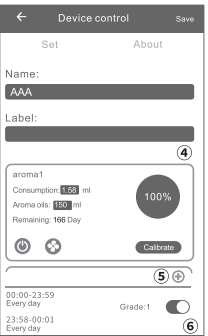


4. On the Device Control page; You can change your device name and label information of your scent diffuser.
NOTE: Press the "Save" button at the top right corner of the screen after each change.

 5. Different schedules by pressing the "+" button. To delete a schedule, swipe left.
6. Press the toggle button to turn on/off any schedule.

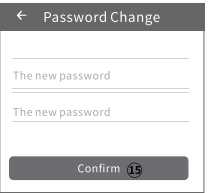

 
15. Enter a new four-digit password, then click "Confirm".

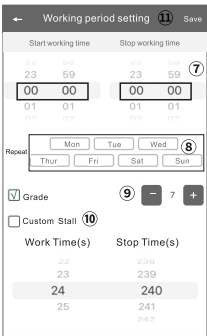

7. On the "Working period setting" page, Set the hours of the day you want your diffuser to run by scrolling the "Start working time" and "Stop working time".
8. Select the days of the week you want your diffuser to run (all days are pre-selected).
9. Press "+" or "-" to increase or decrease the preset intensity grades (1-20. See chart for details).

10. Check (✓) the Custom box to create a custom intensity and scroll the "Spray Time" and "Pause Time".

 11. Press the "Save" button to update the Settings.

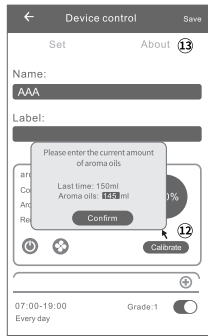

12. Tap "Calibrate" to calibrate consumption. It is advised to calibrate after working for at least 10 days. Please measure the remaining oil of the bottle first before starting calibrating. Enter the current essential oil volume, then click "Confirm" to update the consumption and remaining days automatically.

 
13. Change the default password by pressing on the "About" tab, in the "Device control".



14. Press the "Password Change" to access the password change page.

If you forget the password, please press the on/off button to restore the factory setting. The factory settings password is 8888.

03 Installation step

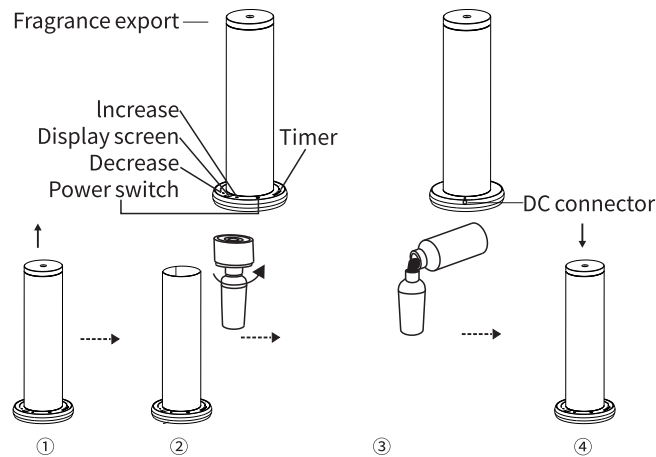


1. Take out the diffuser head;
2. Twist off the bottle;
3. Fill the bottle with essential oil;
4. Put the diffuser head back in the machine.

04 Operations

power on

Connect to 12V 1A power supply, there is "beep" sound coming out.

power off

Press  to turn off the machine

Intensity setting

The machine has 10 intensity levels, Press  to increase the intensity, press  to decrease the intensity.

 
Power indicator

 indicates the direction of the power supply.

Timer

Press the timer button, and the settings cycle in turn, 1H->2H->4H->8H->no timer

Reset Bluetooth App password

press and hold  for 3 seconds to reset password to 8888.


05 Intensity and oil consumption

Grade	Work time(s)	Stop time(s)	Consumption(g/h)
G1	5s	240s	0.05
G2	10s	220s	0.11
G3	15s	200s	0.18
G4	15s	180s	0.25
G5	20s	160s	0.32
G6	20s	120s	0.46
G7	25s	100s	0.60
G8	25s	80s	0.74
G9	25s	60s	0.88
Customized	5-25s	60-600s	—

Note: The data shown above is only for reference, and it is normal for consumption to fluctuate by 15%.

06 ⚠ Warning

 1. Please keep the machine vertical after installation. Tilting or lying flat can cause oil to overflow, and the circuit board may be contaminated, which could affect its efficiency;
2. Should not modify, dismantle or repair the machine arbitrarily. Any malfunction occurs, please contact the relevant technician immediately.



07 Troubleshooting

Before asking to have the machine repaired, please try to diagnose the problem first based on the following instructions.

Breakdown	Solution
No diffuse	- Check if the power is ON or OFF; - Check if the pump is damaged, if yes, please replace a new one. - If there is no diffusion or it is weak, replace the oil by rubbing alcohol and run it through the machine for 5 minutes.
Weak diffusion	- Atomization head may be blocked. Clean the diffuser by alcohol or replace a new atomized core - The atomized core with straw may be missed or damaged. Replace with a new one; - The Pump may be damaged and may need to replace with a new one
Oil sprinkle	- The atomized core may be damaged or leak, please replace with a new one - The machine is tilted or lay flat, please make it upright.
Oil leakage	- The bottle may be loose, make sure to screw it properly. - The seal gasket may be loose, please replace with a new one
Abnormal sound	- The air pump may be loose or damaged, please tighten it or replace a new one.
No display on screen	- Make sure the power is ON; - The plug may be damaged, try another electric outlet, or replace with a new plug - The display screen may be damaged, please contact our relevant personnel

08 Equipment cleaning

The machine needs to be cleaned when the following situations happen:

1. You're about to replace with another essential oil;
2. The atomization volume becomes weak.

Cleaning steps:

1. Find a clean bottle and fill it with industrial alcohol;
2. Install this bottle to the machine and turn the machine on.
Let it work for 5-10 minutes;
3. Turn the machine off, and the cleaning is finished